SLIDING DOOR: PLANNING

SYSTEM AIR-B SYNCHRO SERIES 1200

Version 1.0 (2017-08-08)

easy medium difficult

Installation

Assemble

Subject to technical changes.



CONTENT AND TOOLS

CONTENT:	Content and tools	page	02
	Product information	page	03
	Accessories AIR-B Synchro S1200	page	05
	Accessories AIR-B Synchro S1200 with GTB	page	06
	Measurenment	page	07
	Detail drawings	page	09
	AIR-B Synchro S1200	page	14
	AIR-B Synchro S1200 with GTB	page	15
	Cuttting dimensions profiles	page	16

Cutting dimension panel / mirror

TOOLS:

(without claim of completeness)

- Aluminium saw
- Pencil
- Drill set (metall)
- Drilling machine
- Rubber mallet

- Allen key set
- Straight edge (optionally)

page

17

- Wire cutting pliers
- Water level



VERSION INFORMATION:

Version 1.0:

PRODUCT INFORMATION

GENERAL INFORMATION: Preparation

- This manual is part of the product and describes the safe and proper installation of the system. Please read the instructions carefully before installation
- Please note that the assembly should only be done by qualified and trained staff in strict compliance with all details indicated in this document. Improper installation in variation from manufacturer's specification may cause defects and danger, thus endangering the safe fixing of the product as well as the safety of the prospective user. The liability of the manufacturer shall be excluded in case of defects and consequential damages resulting from incorrect assembly of this product.
- Please check the completeness of the delivered parts and check carefully if any transport damages are visible.
- If any parts are damaged or lost, please immediately contact the responsible supplier.
- It is assumed that you have exactly identified all cutting dimensions according to the measurement instruction for **raumplus** products.

SYMBOLE:

Symbol Importance



Risk or danger!



Advice and information



Additional information / other documents



Directional data / direction of movement



"yes" and "right"



"no" and "wrong"



Follow the order

SYSTEM:

System Information: System AIR-B S1200

max. weight of element

= 60 kg

■ min./max. door height

= 700 mm / 2750 mm

■ min./max. door width

= 500 mm / 1400 mm

PRODUCT INFORMATION

GENERAL INFORMATION: Product safety

The System AIR-B S 1200 complies with the prior of the art and the authorized safety rules at the time of delivery.

USE:

Intended use

- The prerequisite for the intended use of our products is the professional installation according to our installation instruction. Sufficient fittings must be available and durably installed to all relevant places.

 The function of the fittings must not be hindered or altered during installation.
- Special solutions are only possible in consultation with raumplus.

Incorrect use


- Risk or danger may occur in the following cases:
- the door system has improperly been installed or maintained
- the safety and installation instructions have not been followed.
- after improper installation or inadequate fixing (e.g. to parts of buildings)
- the maximum weight of the doors has been exceeded.
- improper shock and case loads or other additional loads on the fittings have occured
- the fittings have been used outside.
- body parts or objects got into the closing edges or door runnings during use of the door wing.
- the door system is not used as intended.

Structural modifications


Structural modifications that are not offered as an accessory from **raumplus** may only be attached or installed with permission of **raumplus** GmbH!

ACCESSORIES


AIR-B SYNCHRO S1200

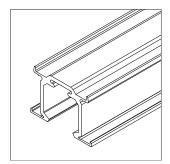


1_ 14.55.0xx

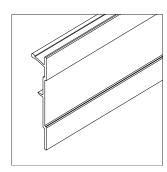


2_ 14.50.0xx

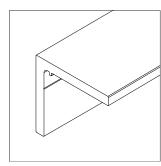


3_ 14.54.020

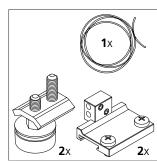


4_ 10.06.065

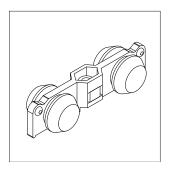


5_ 10.06.200

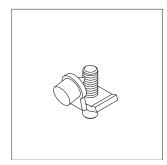


6_ 10.05.060

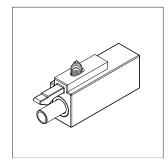


7_ 10.05.017

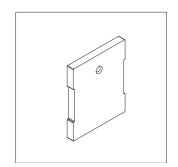

8_ 10.05.xx1

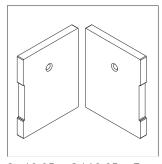

9_ 10.05.xx6 / 10.05.xx7

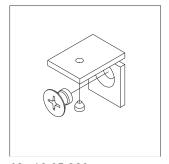

10_ 10.05.290

- 1_ Top track insert AIR
- 2_ Cover profile, 60mm
- 3_ Wall connection profile for AIR S42
- 4_ Synchro fitting S1200 AIR -B
- **5**_ Top roller AIR
- **6**_ Stopper for top roller AIR w/o brake
- **7**_ Stopper for top roller AIR
- 8_ End cap for top track insert 40mm, AIR S42
- **9**_ End cap for wall connection profile AIR, left

10_ Connector for end cap AIR

without illustration:


13_ Bottom guiding AIR 12 mm

(10.05.047) (10.05.048)


14_ Distance plate for guiding

ACCESSORIES


AIR-B SYNCHRO S1200 WITH SLIDING DOOR BRAKE

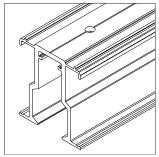




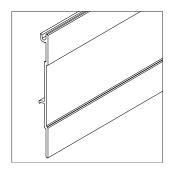


2_ 14.52.0xx

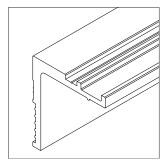


3_ 14.57.020

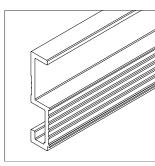


4_ 14.58.020

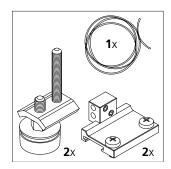

5_ 10.06.066

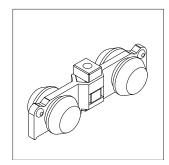


6_ 10.06.300

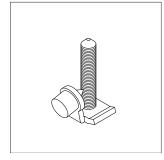


7_ 10.06.360




8_ 10.06.365

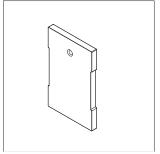


9_ 10.06.xx1

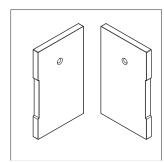

10_ 10.06.xx6 / 10.06.xx7

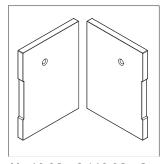

11_ 10.06.xx2 / 10.06.xx3

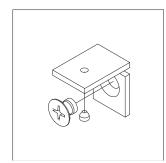

(10.06.350)

12_ 10.05.290

- 1_ Top track insert for AIR S42 with SDB
- 2_ Cover for insert profile AIR S 42 with SDB 80 mm
- 3_ Wall connection profile S42 AIR SDB
- 4_ Wall connection distance profile AIR S 42 with SDB
- **5**_ Synchro fitting S 1200 AIR with SDB
- **6**_ Top roller SDB AIR
- 7_ Stopper for top roller with SDB AIR
- 8_ Sliding door brake AIR
- **9**_ End cap for top track insert S 42 SDB, single, 80 mm


- 10_ End cap for wall connection profile, left / right
- 11_ End cap for wall connection & distance profile, left / right
- 12_ Connector for end cap AIR

without illustration:

- **13**_ Screw DIN 914 M3 x 5 for attachment of the cover at the top track (10.06.350)
- **14**_ Screw DIN 571 8 x 50 for Wall connection- and distance profile (recommended)
- **15**_ Bottom guiding AIR 12 mm (10.05.047)
- **16**_ Distance plate for guiding (10.05.048)

MEASUREMENT


AIR-B SYNCHRO **\$1200**

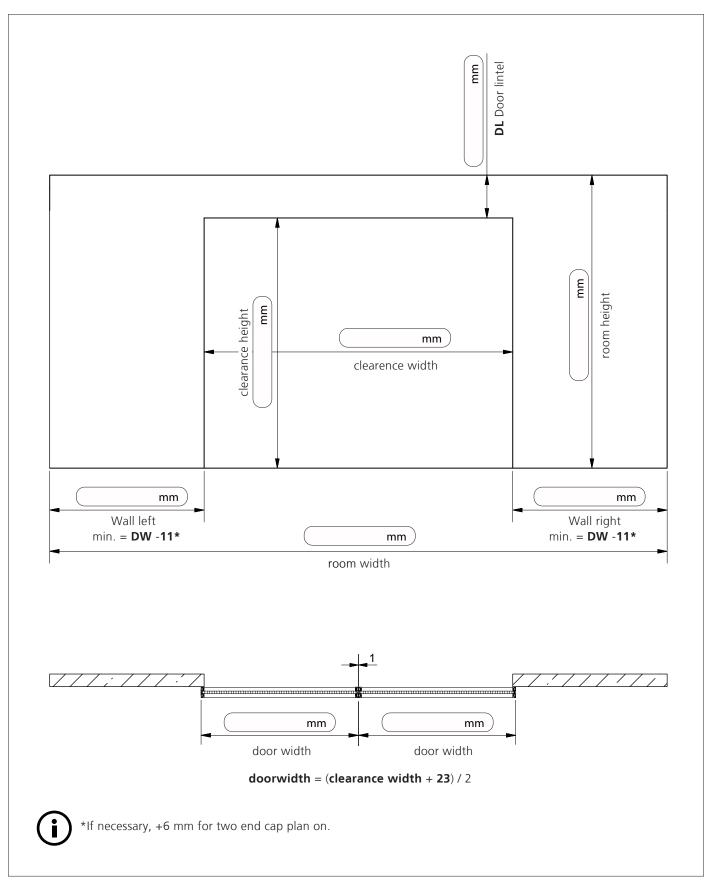

¹_ Calculation of the door width


OVERLAP RANGE

AIR-B SYNCHRO **\$ 1200**

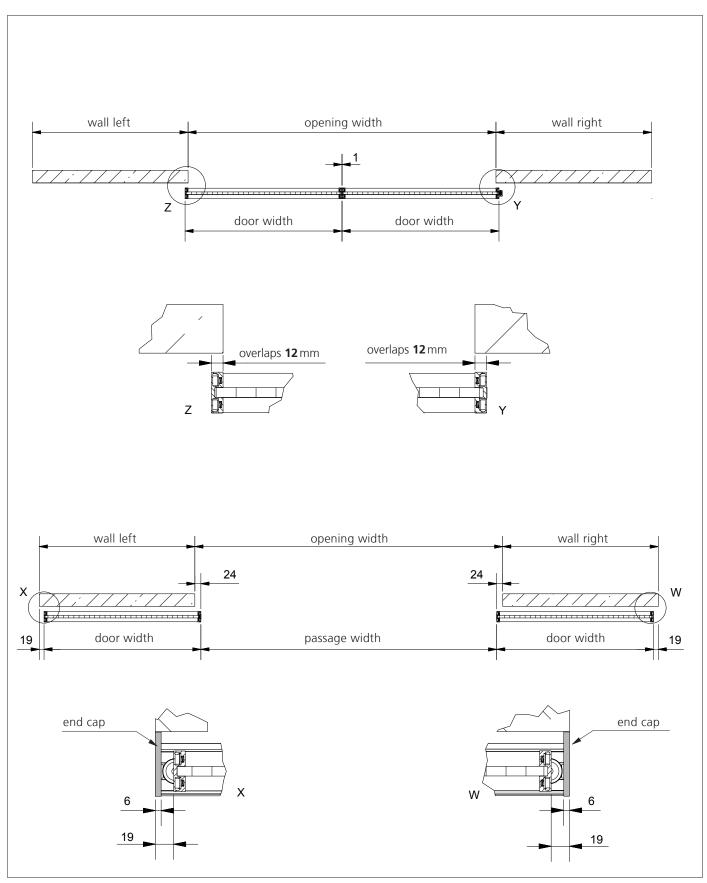


1_ Calculation the passage width


VERTICAL SECTION AIR-B SYNCHRO **\$1200**

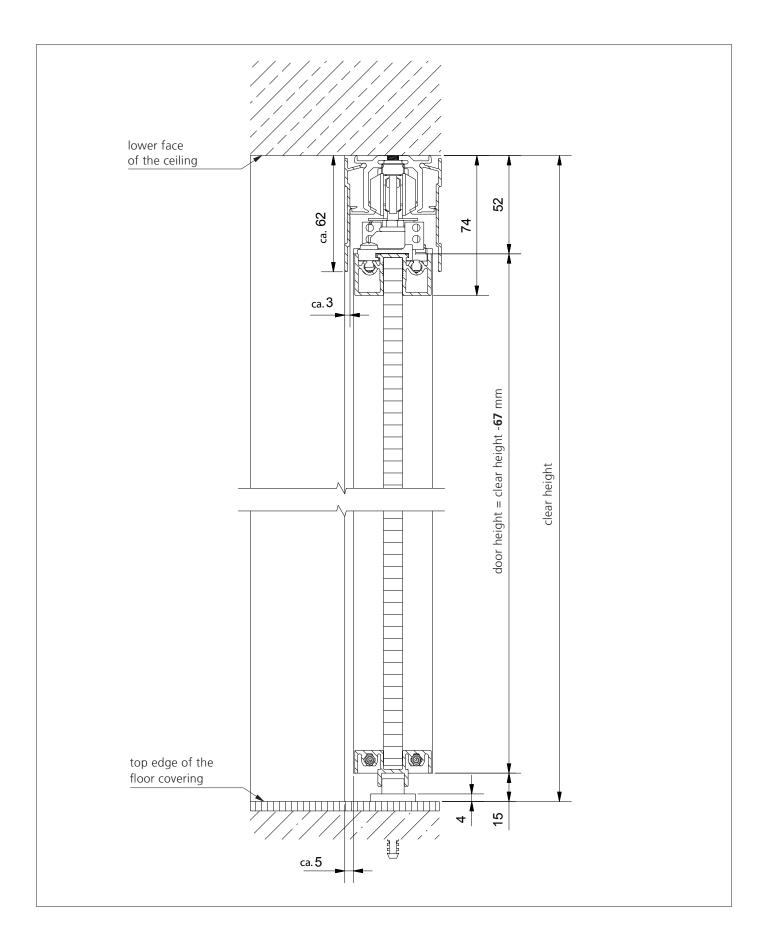


VERTICAL SECTION AIR-B SYNCHRO S 1200 WITH WALL CONNECTION PROFILE

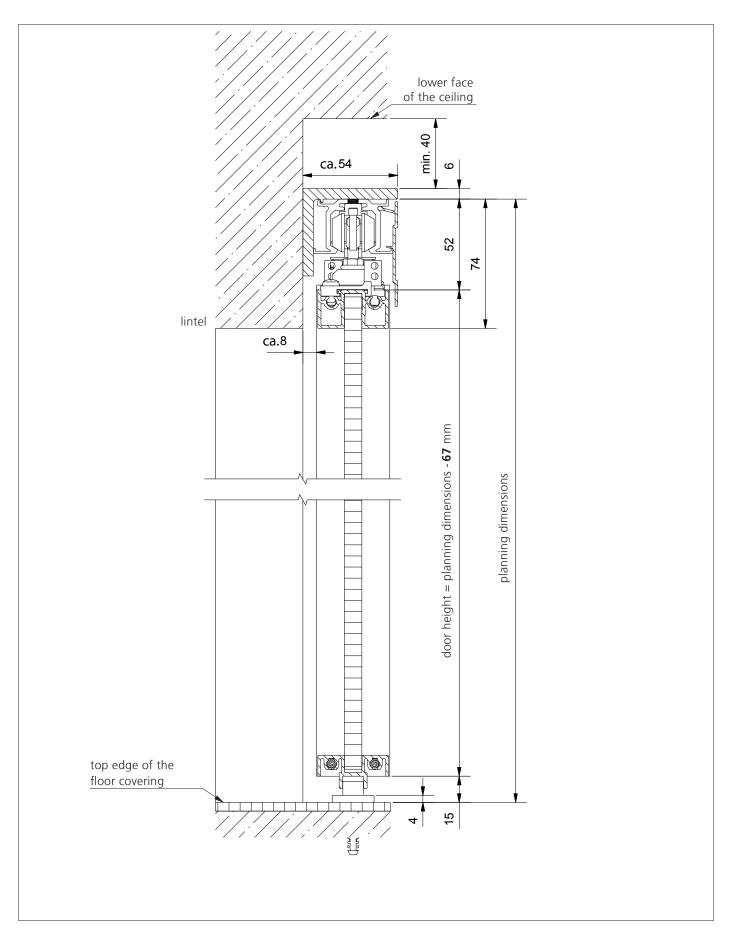


VERTICAL SECTION AIR-B SYNCHRO S1200 WITH SLIDING DOOR BRAKE

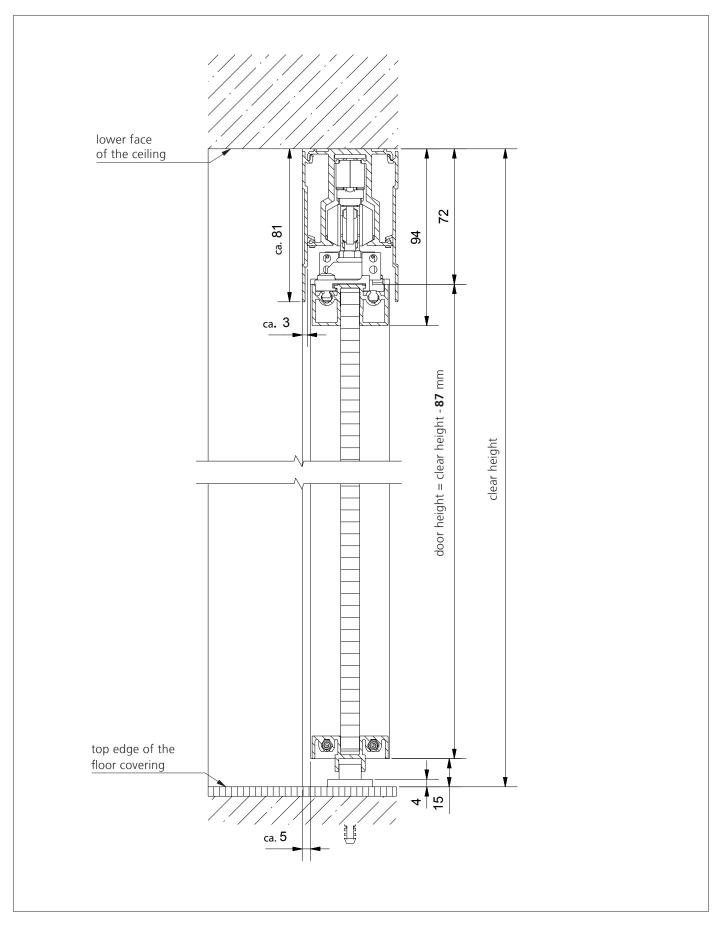

VERTICAL SECTION AIR-B SYNCHRO **\$1200** WITH **SLIDING DOOR BRAKE** AND **WALL CONNECTION** PROFILE

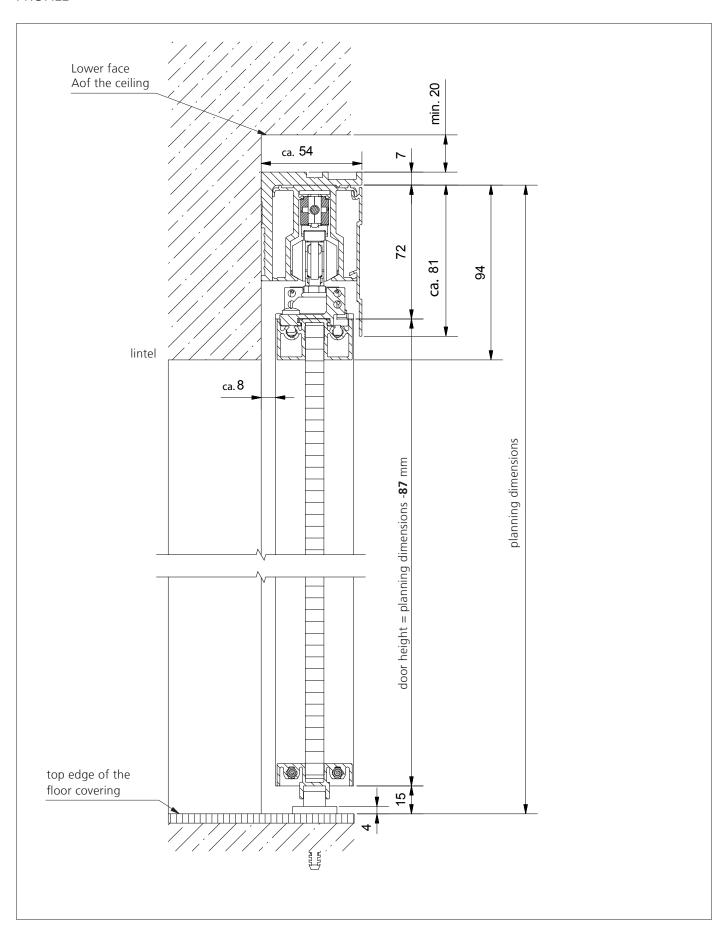


VERTICAL SECTION AIR-B SYNCHRO **\$1200** WITH **SLIDING DOOR BRAKE**, WALL CONNECTION **DISTANCE** PROFILE AND **WALL CONNECTION** PROFILE

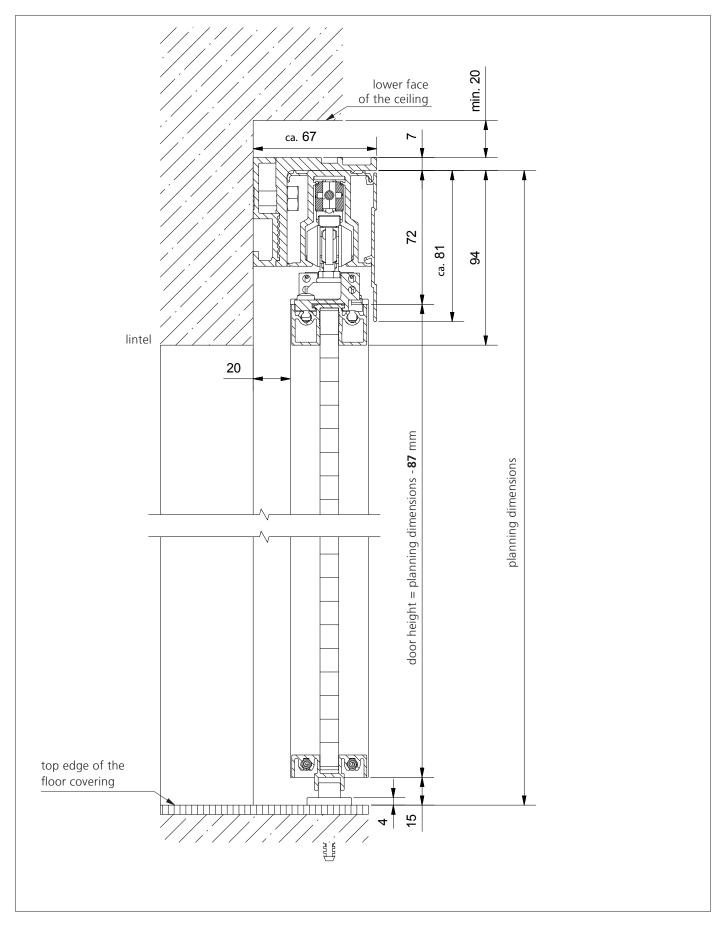

AIR-B SYNCHRO S 1200


EXPLODED DRAWING

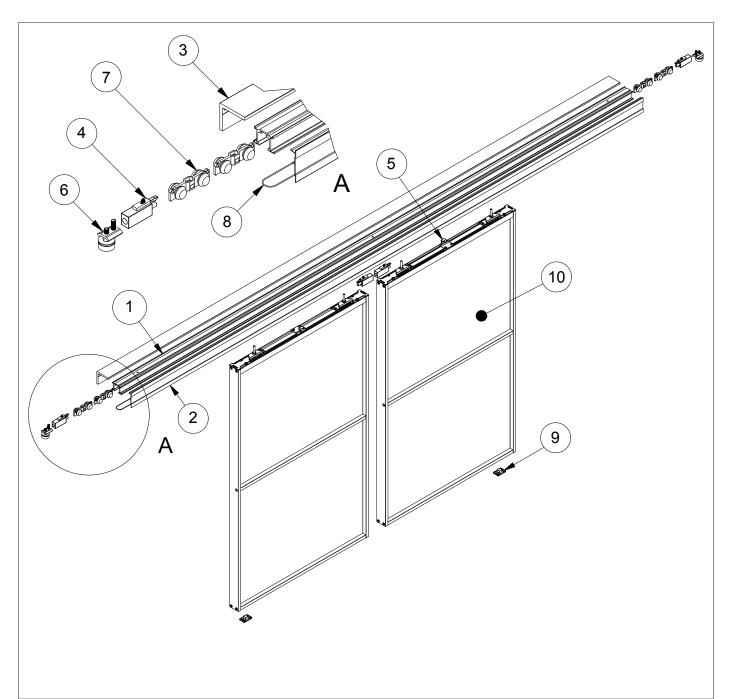

Item list			
Object	Quantity	Item	Item no.
1	1	Top track insert AIR \$42	14.55.0xx
2	1	Cover profile, 60 mm AIR	14.50.0xx
3	1	Wall conn. profile for air \$42	14.54.020
4	4	Stopper for top roller AIR	10.05.017
5	2	Door connector S 1200 for synchro fitting air, complete	10.06.065A
6	1	Synchro fitting S 1200 AIR	10.06.065
7	4	Top roller AIR	10.06.200
8	1	Wire for synchro	10.06.060A
9	2	Bottom guiding 12 mm	10.05.047
10	2	AIR-B S 1200	/


AIR-B SYNCHROS 1200 WITH SDB

EXPLODED DRAWING

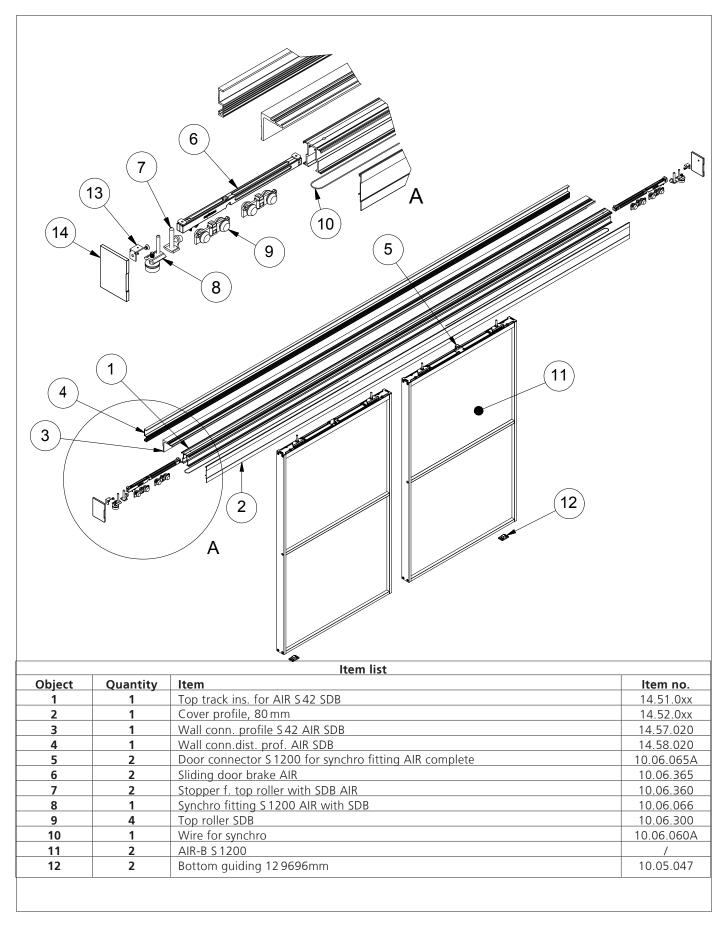

CUTTING MEASURES PROFILES W/O SDB

SITLES AND DRILL PATTERN

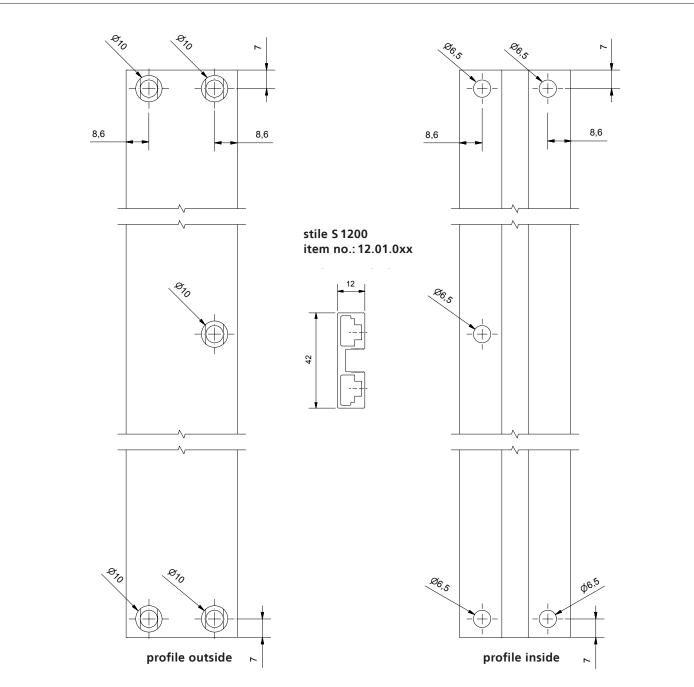

CUTTING MEASURES PROFILES 5 1200 AIR:

Door height = room height - 67 mm

Cross rail length = door width - 24 mm

min. / max. door width = 500 mm / 1200 mm

min./ max. door height = 700 mm / 2750 mm

max. door weight = 60 kgOverlap = 12 mm

CUTTING MEASURES PANEL S 1200 AIR (w/o dividing rail):

Panel height = door height - 7 mm wood

= door height -8 mm (with gasket)

Panel width = door width - 11 mm

CUTTING DIMENSIONS PANEL / MIRROR

HEIGHT MEASUREMENT

