INTERIOR SYSTEM: ASSEMBLY INSTRUCTIONS

FLUA WOODEN DOOR

Version 1.2 (2013-05-23)

5.16.1.c

easy medium difficult
Assemble

raumplus

INDEX & TOOLS

NDEX:	General information and tools_	page 03
	Accessories_	page 04
	Detaildrawing closet corpus_	page 05
	Exploded drawing doors_	pages 08 - 09
	Drilling template doors_	pages 10 - 11
	Straighten-door gear_	pages 12 - 14
	Cutting dimensions_	page 15

TOOLS:

- Cross tip screwdriver
- Cordless screwdriver



VERSION INFORMATION:

Version 1.1: Screws not included, recommendation added. Version 1.2: Added damper units to 60 Kg / updated terms

GENERAL INFORMATION

GENERAL INFORMATION:

Preparation:

 Please check the completeness of the delivered parts and their item numbers according to the delivery note and the assembly instruc-

tion.

- Please check the delivered parts for possible damage.
- If several parts are damaged or lost, please contact your responsible retailer
- Please note that the assembly must only be performed by qualified and trained staff in strict compliance with all details indicated in this document.

 Improper installation in variation from manufacturer's specification may cause defects and danger, thus endangering the safe fixing of the product as well as the safety of the prospective user. The liability of the manufacturer shall be excluded in case of defects and consequential damages resulting from incorrect assembly of this product.

SYMBOLS:

Symbol	Importance
Ţ	Risk or danger!
(<u>:</u>	Advice and information
	Additional information / other documents

	Directional data /		
	direction of movement		
/	"yes" and "right"		
X	"no" and "wrong"		
1,2,3,	Follow the order		

Notice:

- It is assumed that you have exactly identified all cutting dimensions.
- For help with your raumplus-product, please contact your responsible retailer.

Assembly or installation?


- For the assembly of the delivered raumplus-product please follow the job steps described in the assembly instruction.
- For the installation of the delivered raumplus-product please follow the job steps described in the installation instruction.

 
SYSTEM:


Information

- max. door weight 60kg
- min. / max. door height = 700mm / 2750mm
- min. / max. door width = 750mm / 1800mm


ACCESSORIES

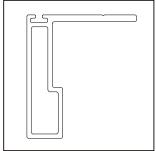




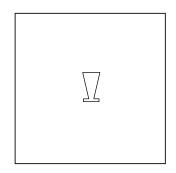

2_10.20.06x

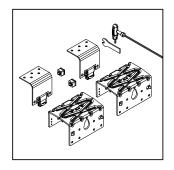

3_10.20.110

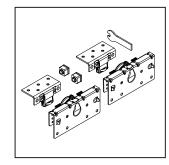

4_ 10.20.120

- 1_ Stile wooden door
- 2_ Dust excluding brush
- 3_ Sliding mechanism set exterior door
- 4_ Sliding mechanism set interior door
- 5_ Door straightening system, 1 Set at a door, w/o fig.


(10.20.007)

Screews (not included) for

1_ Stile wooden door Würth Chipboard Screws 4 x 16 Countersunk head with full thread Würth Model (0198 4 16)


- 3_ Sliding mechanism set exterior door
- 4_ Sliding mechanism set interior door
- 5_ Damper set interior door
- 6_ Damper unit exterior door Würth Chipboard Screws 4.5 x 16 Countersunk head with full thread Würth Model (0198 45 16)

CABINET

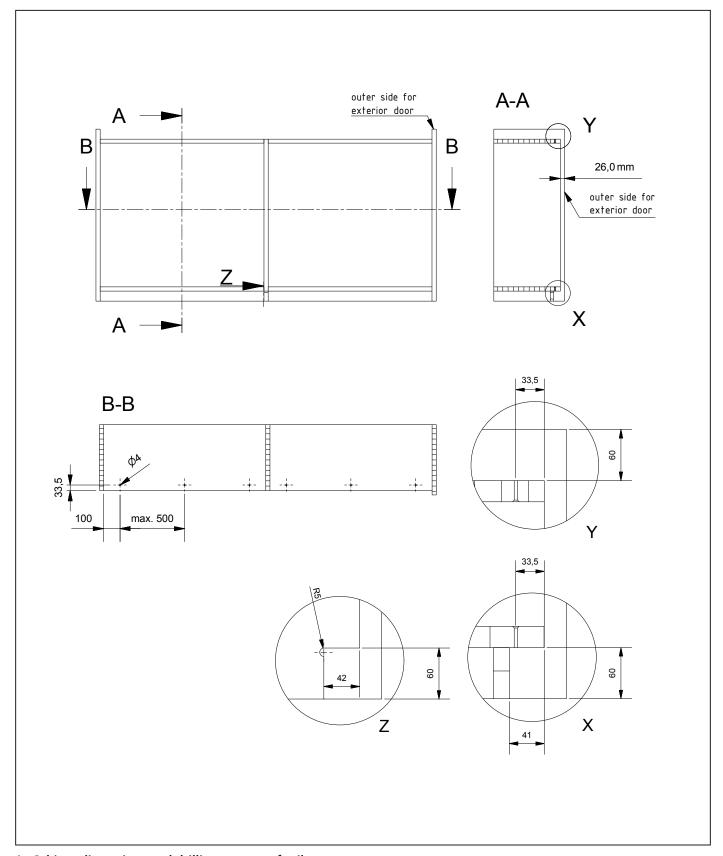


INTERIOR DOOR

EXPLODED DRAWING

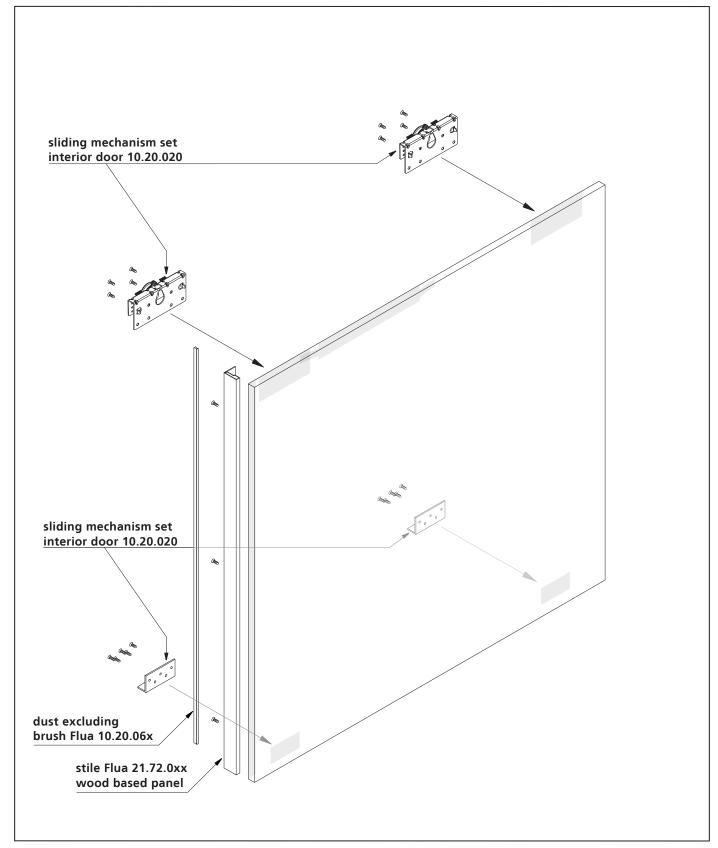


EXTERIOR DOOR

EXPLODED DRAWING

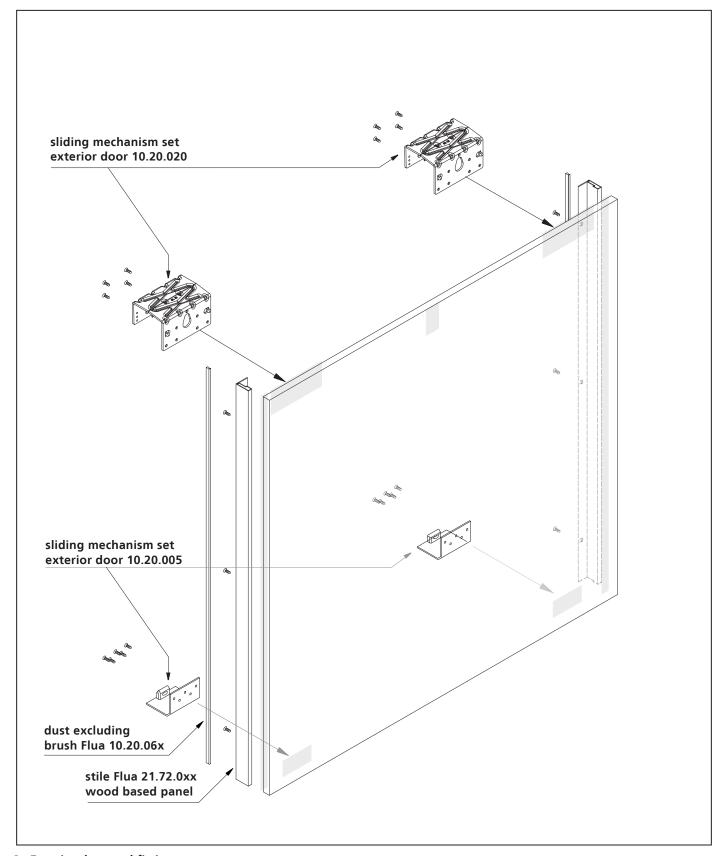


DRILLING TEMPLATE

INTERIOR DOOR AND STILE

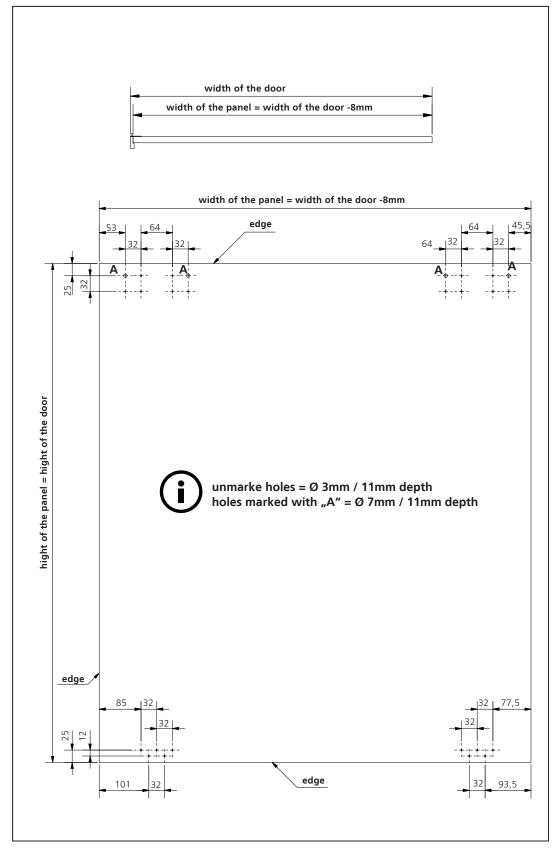

The drilling pattern applies to all vertical profiles.


The door panels do not predrill.

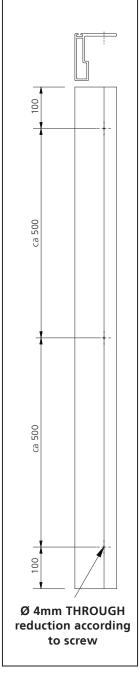


1_ View of the rear

DRILLING TEMPLATE

EXTERIOR DOOR

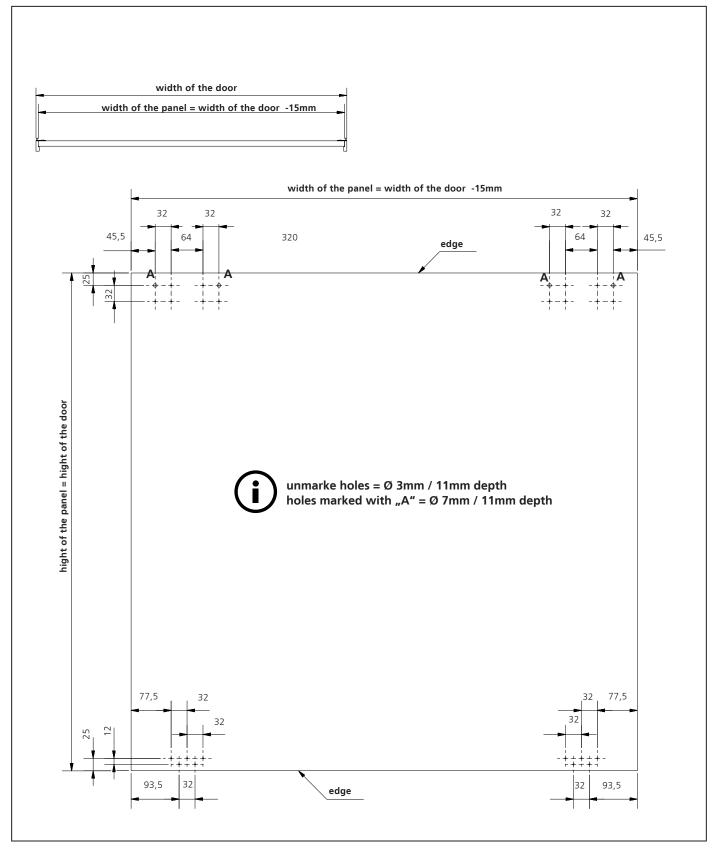


INTERIOR DOOR MOUNTING THE FITTINGS

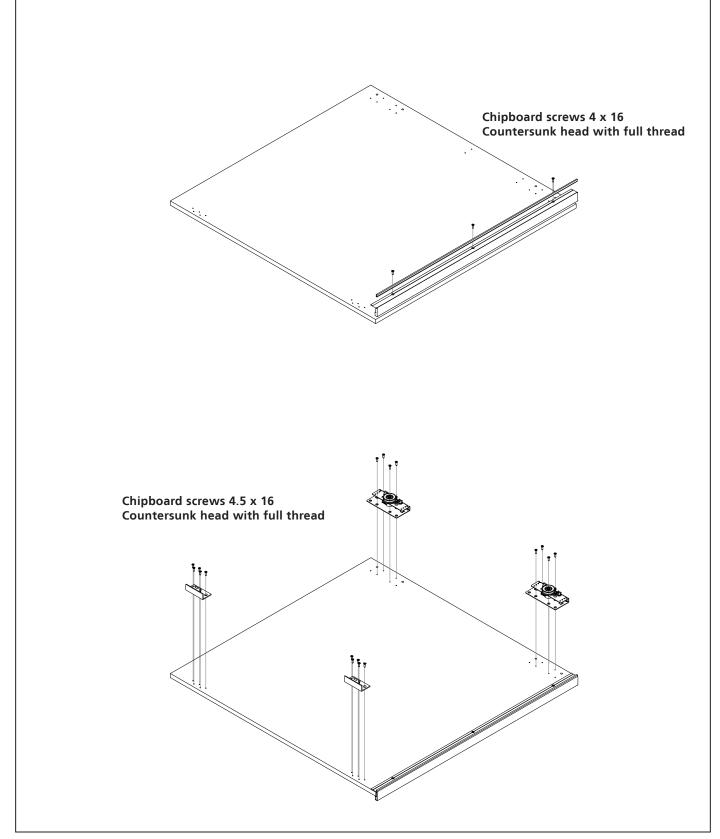


¹_ Fixing of all available fittings and profiles with the included screws


EXTERIOR DOOR MOUNTING THE FITTINGS

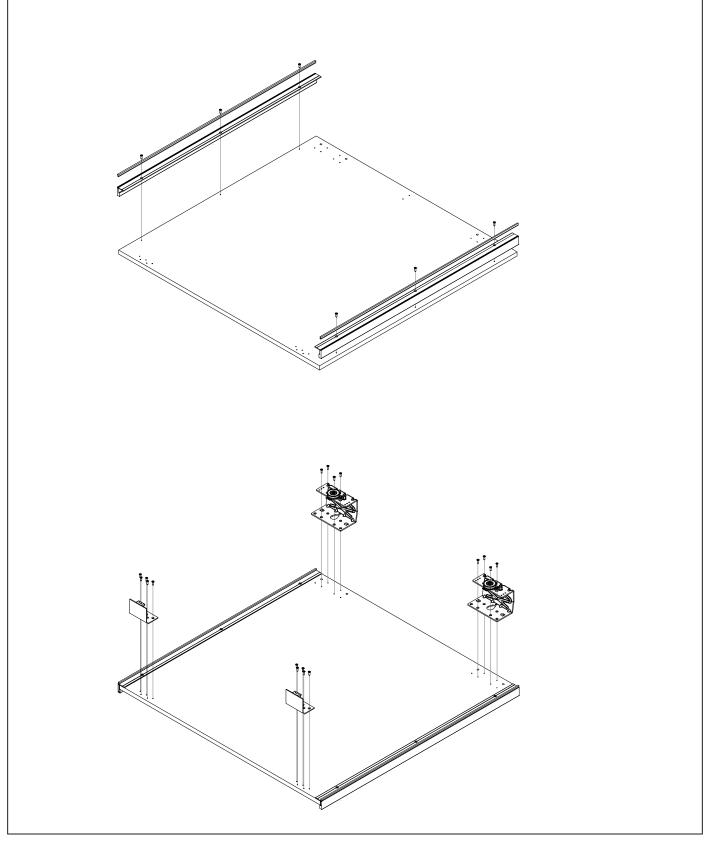


DETAILED DRAWINGS DRILLING TEMPLATE / MILLING PATTERN STRAIGHTEN-DOOR GEAR

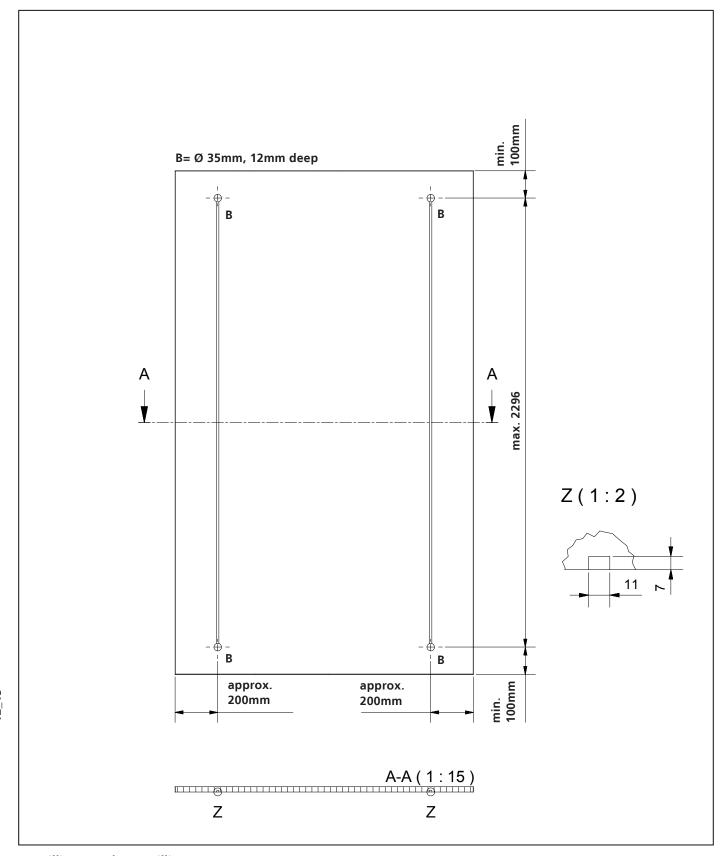

MOUNTING STRAIGHTEN-DOOR GEAR

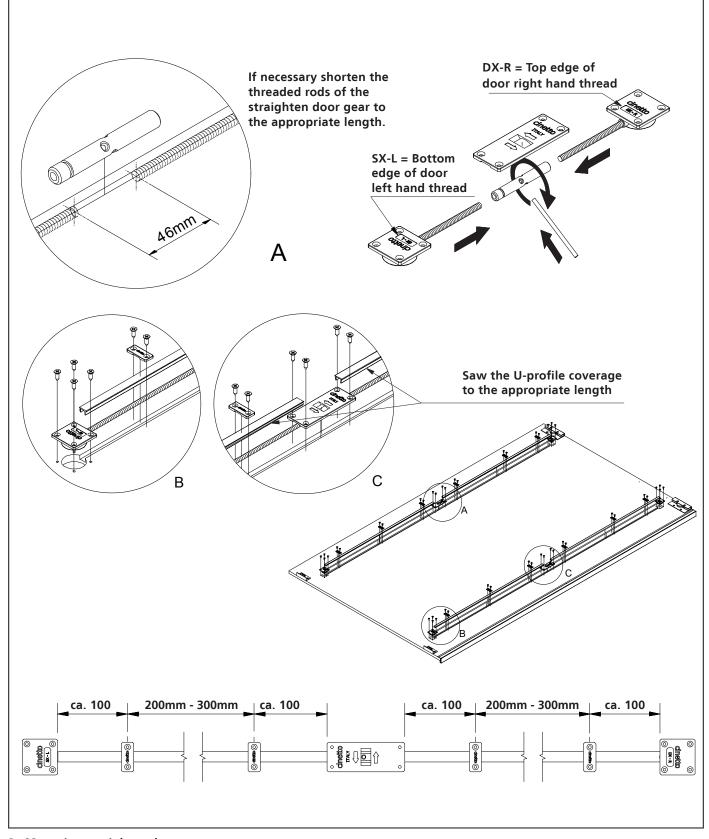

ALIGNING THE DOORS

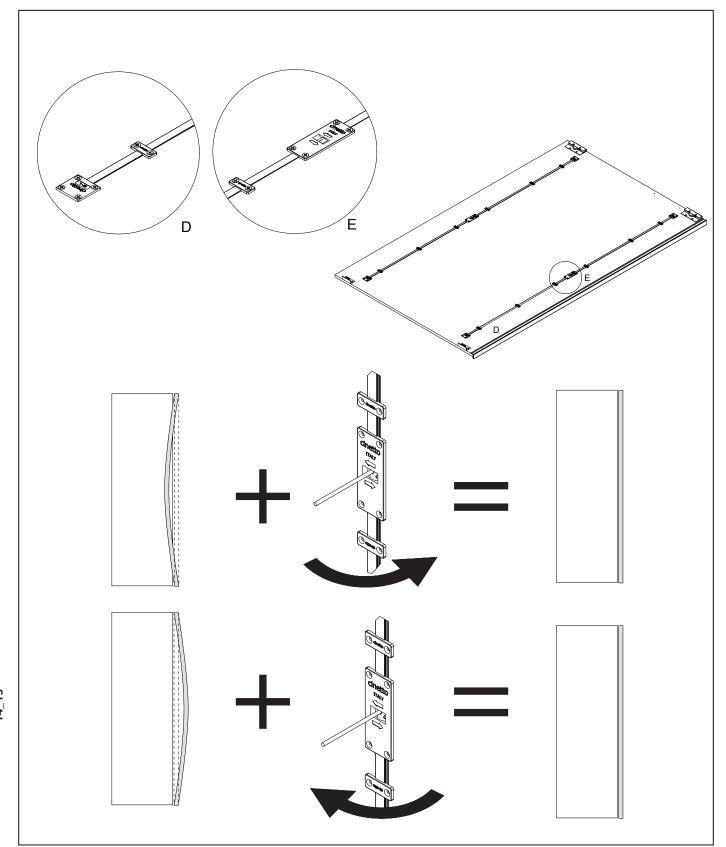

CUTTING DIMENSION

INTERIOR AND EXTERIOR DOOR

