


INTERIOR SYSTEMS: ASSEMBLY INSTRUCTIONS


INTERIOR SYSTEMS CORNICE 566

Version 4 Up to date April 2010
(Hanging rod / Socket for hanging rod)


ACCESSORIES:

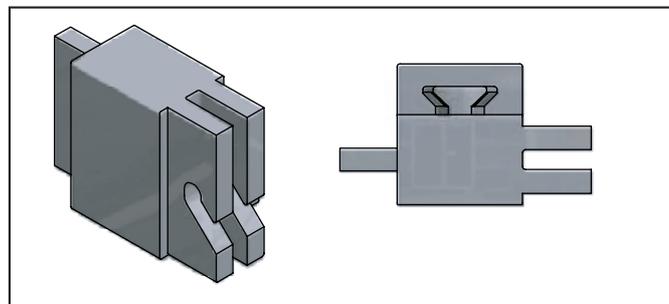


1_

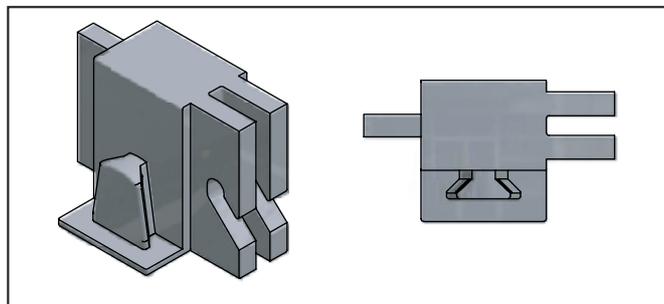


2_

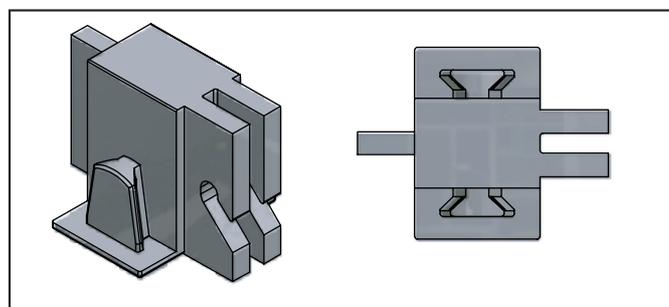


3_

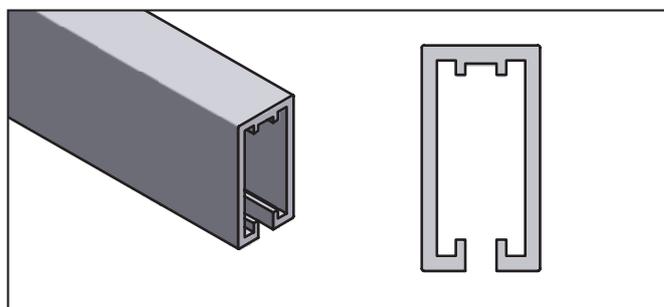


4_

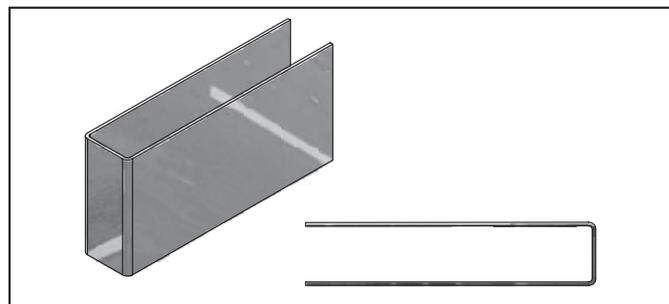

5_

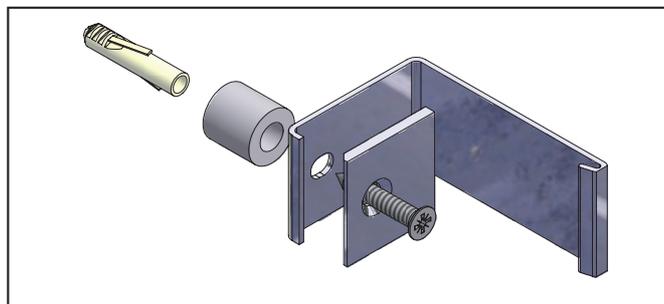

6_

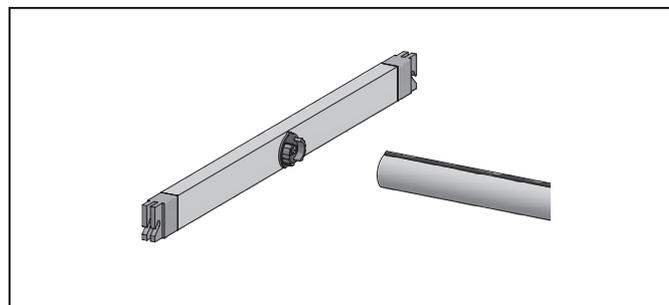


7_ & 8_

- 1_ Bottom connector one-sided (type A) (82.10.001)_
- 2_ Bottom connector one-sided (type B) (82.10.002)_
- 3_ Bottom connector both-sided (82.10.003)_
- 4_ Cover profile 362 mm (82.11.020) (with drilling for hanging rod)_
- 5_ Cover (82.10.009)_
- 6_ Wall connector (82.10.006), Spacer (82.10.016), Position plate (82.10.007), screws and dowels_
- 7_ Hanging rod connection (82.10.012)_
- 8_ Hanging rod (82.23.020)_


raumplus

_ASSEMBLY

1

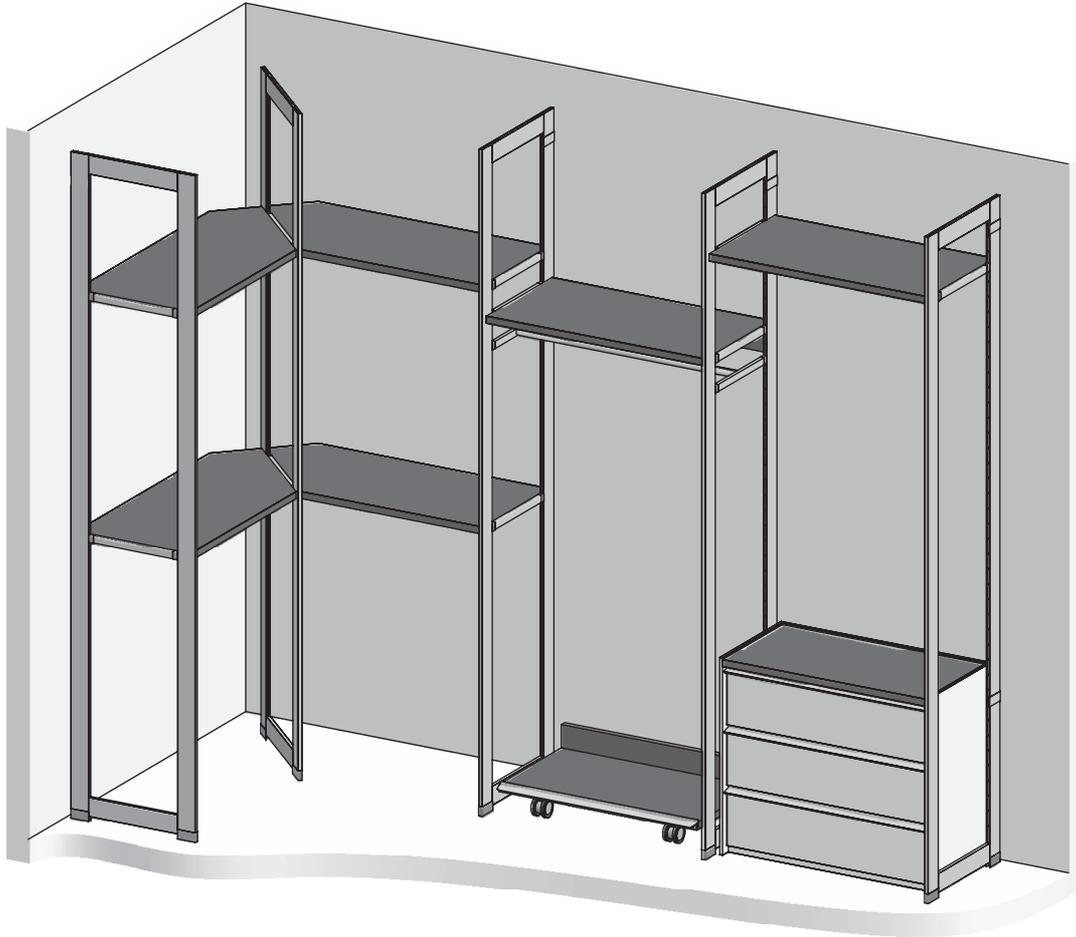

Distance to the wall

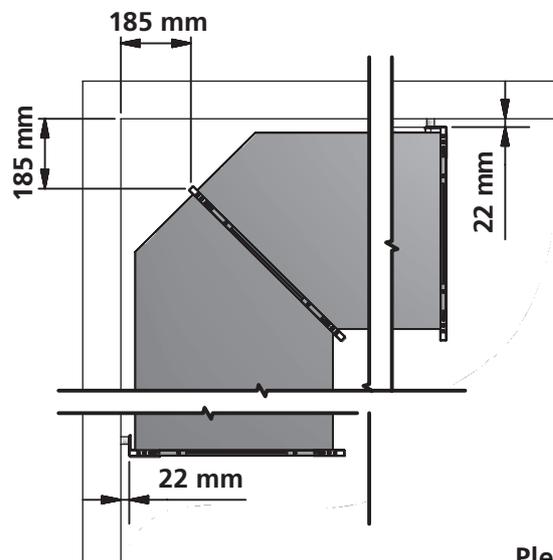

Please make sure that you start in the corner

_ASSEMBLY




2

Preparation for the installation

Slide the caps onto the frame before the assembly.

After the alignment and installation of the wall attachment.


you won't be able to attach the caps on the side of the wall anymore.

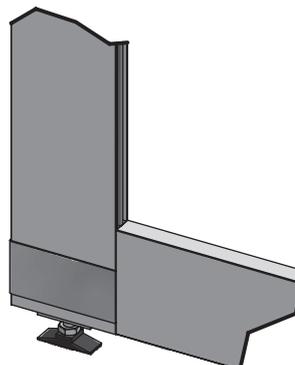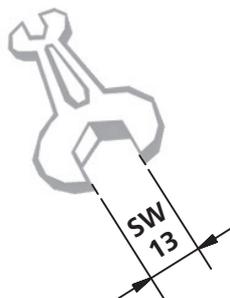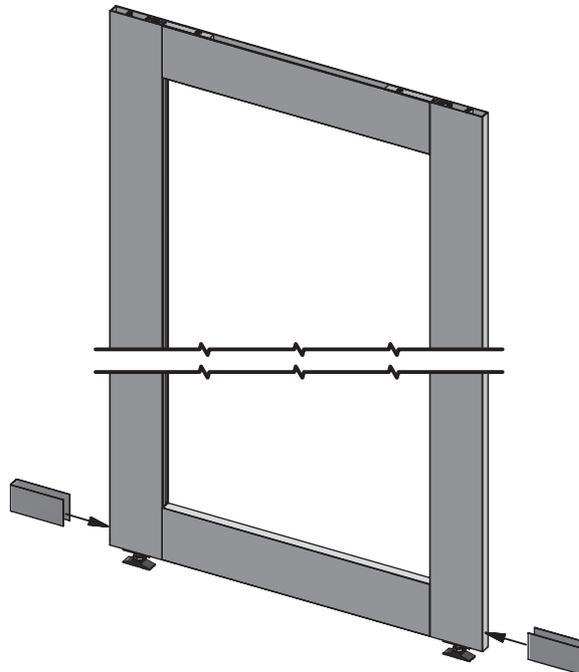



_ASSEMBLY

3


A

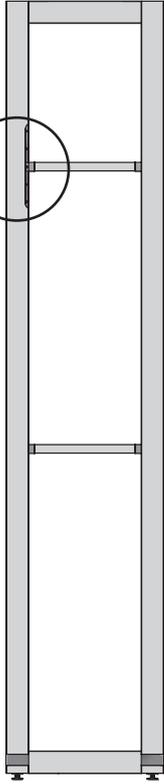

A

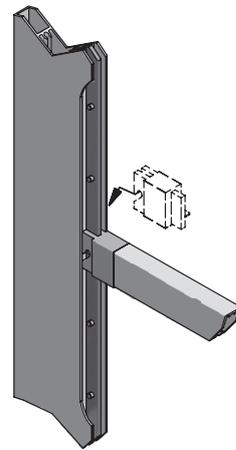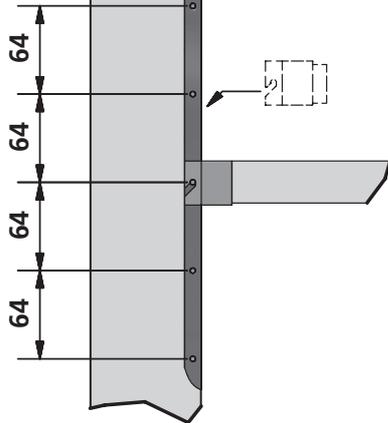


4

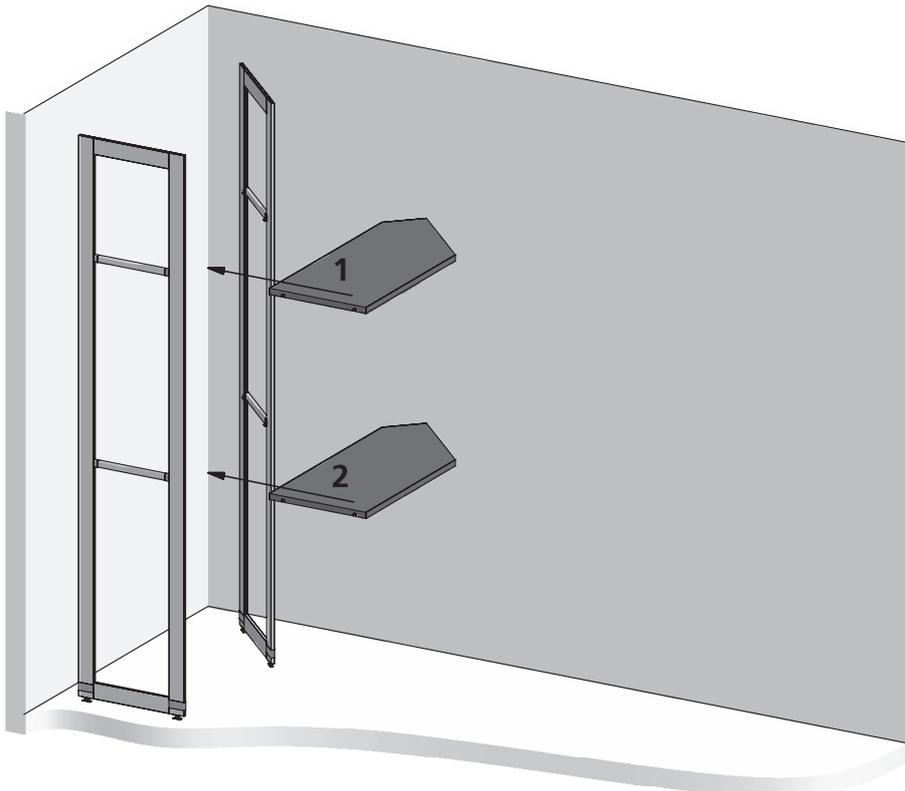


_ASSEMBLY

5

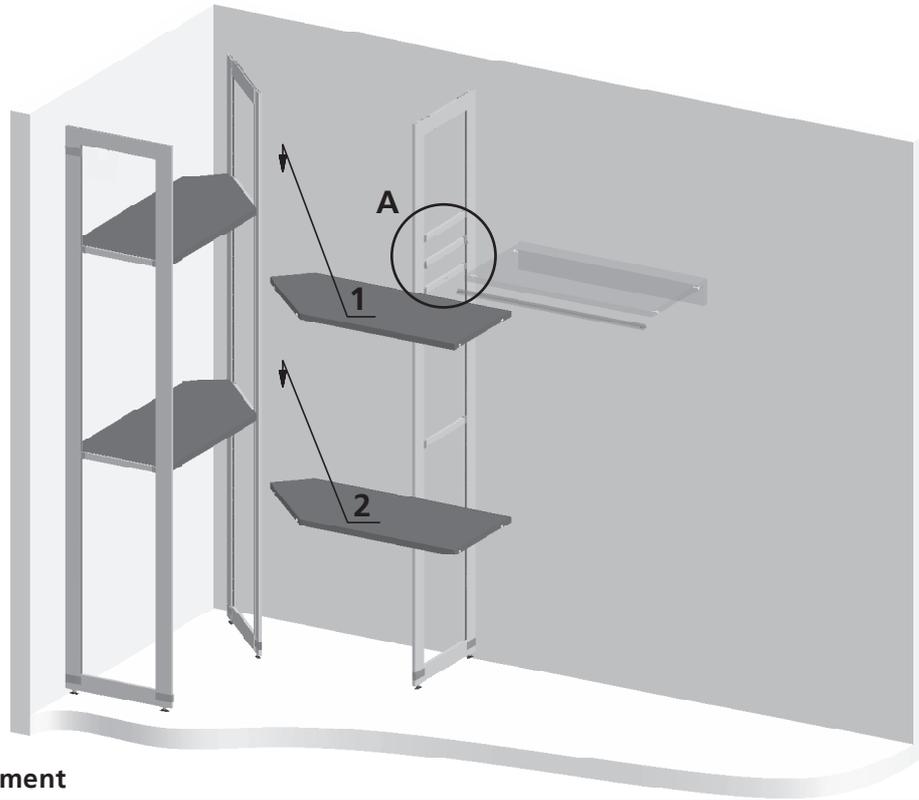

Now start the adjustment


6

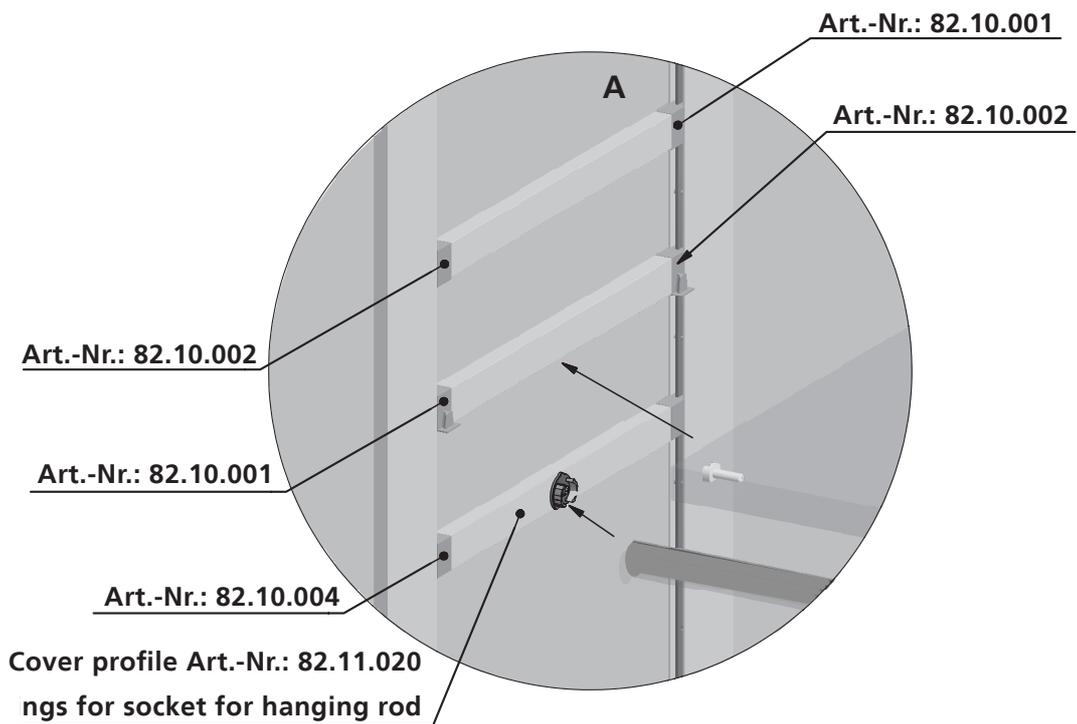


w

_ASSEMBLY

7

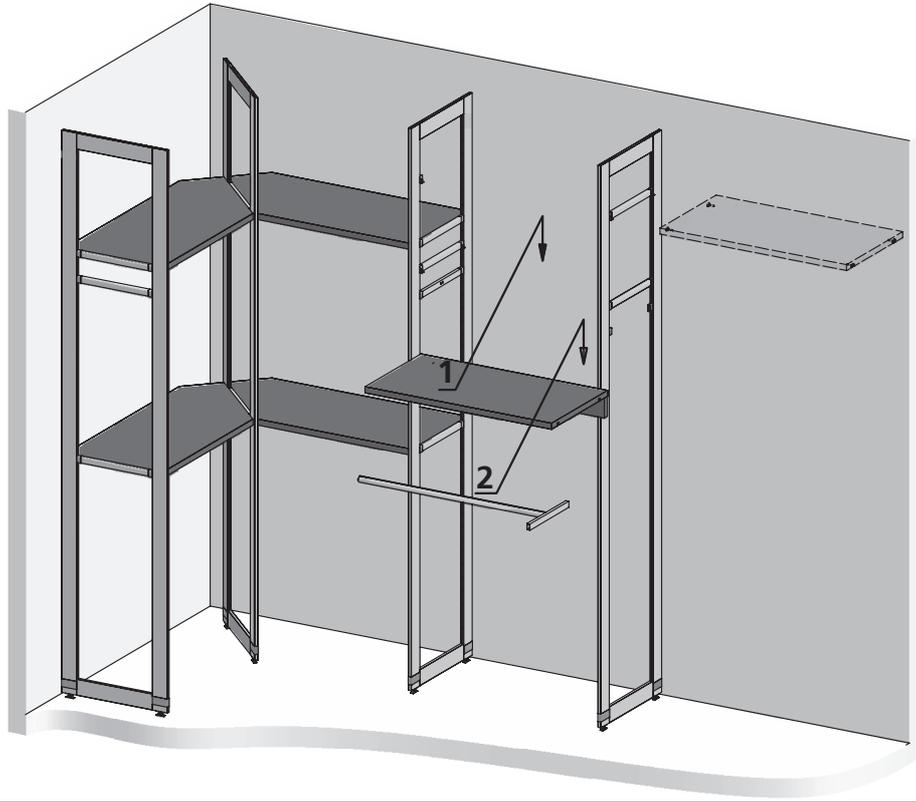


8

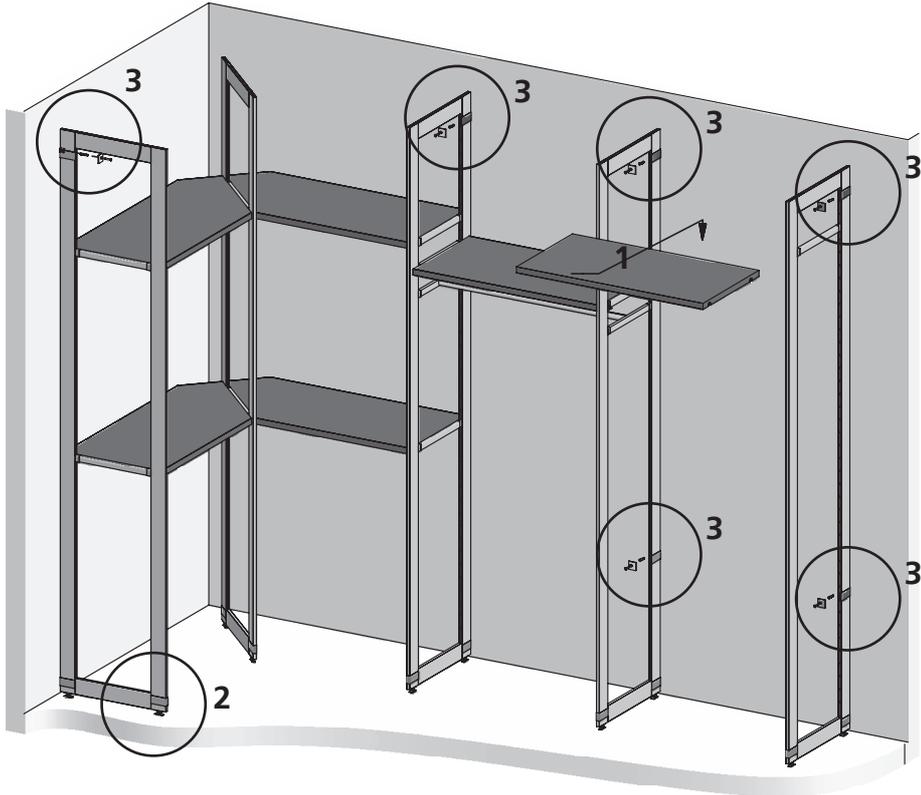


_ASSEMBLY

9

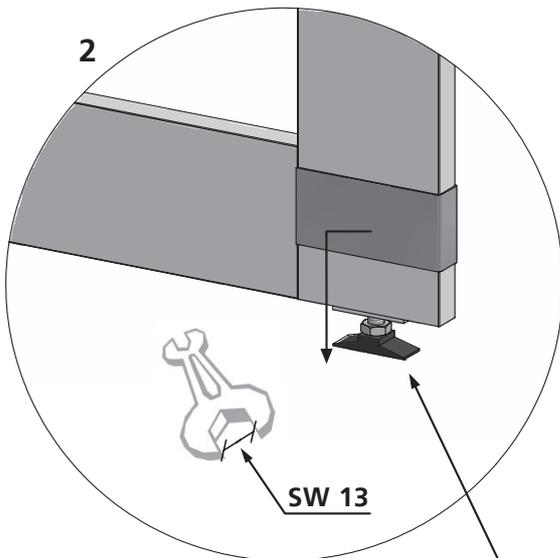


Afterwards, adjust all frames and slide the cover until it reaches the flooring.

After the assembly and alignment you can begin with the wall attachment.

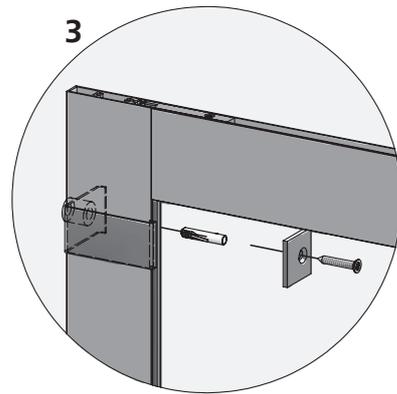


10

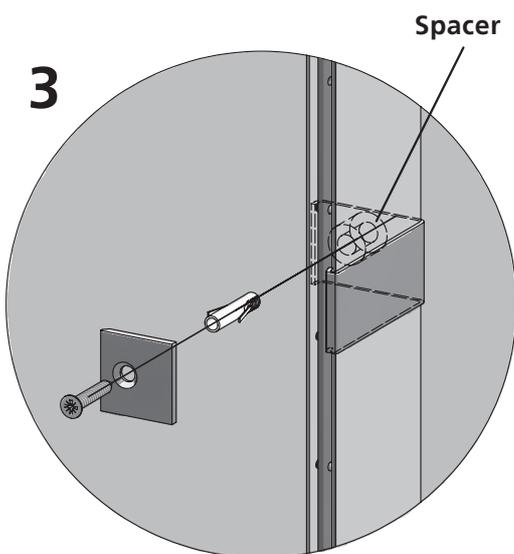


To affix the frame, you can place another wall attachment in the lower third.

_ASSEMBLY

11

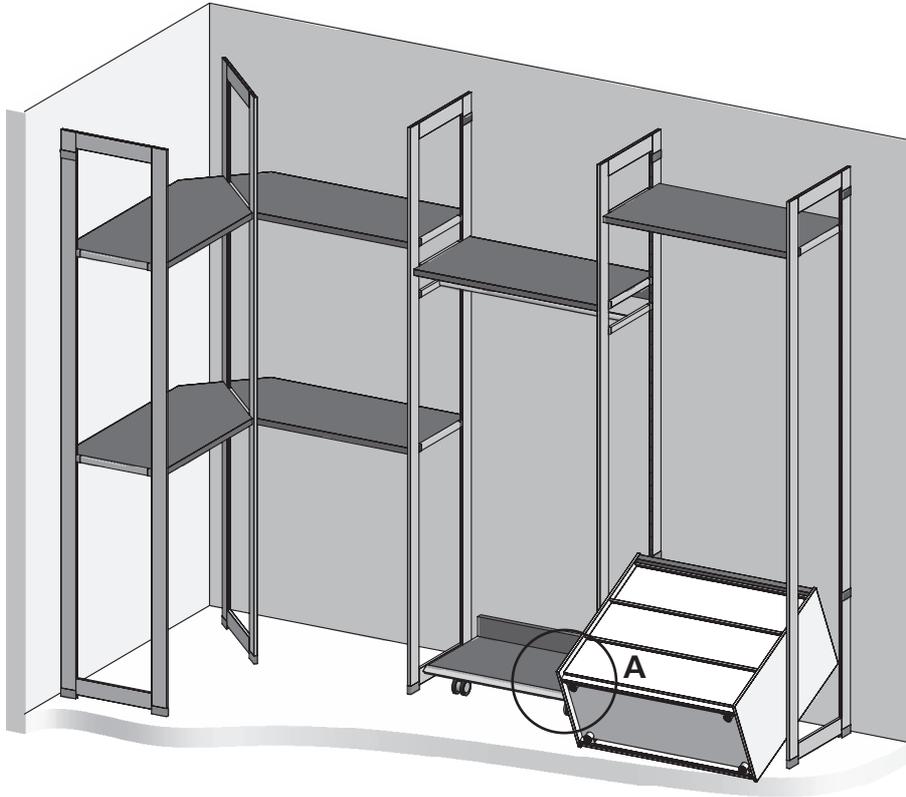

12

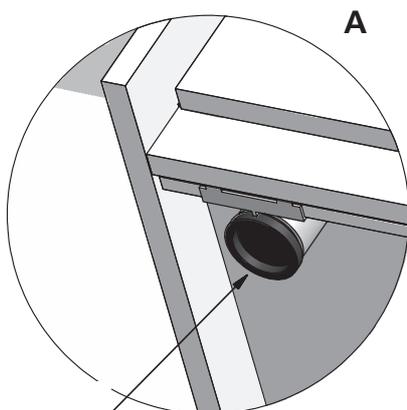

Use the height adjustment elements of the cabinet to adjust any imbalances in the floor.

Hexagon socket 8 mm